




Model 9001 ULTRA-LINE® Pressure Control Module

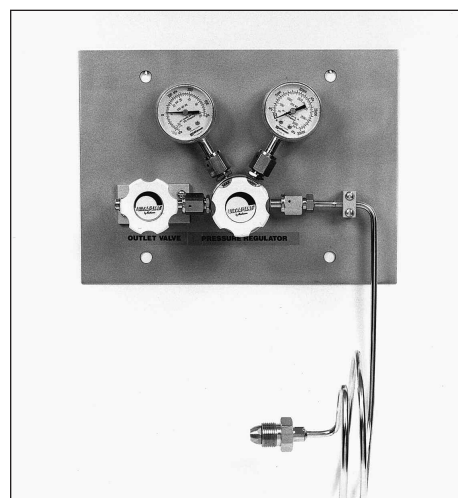

Model 9001 ULTRA-LINE® Pressure Control Module shown with regulator and outlet valve (regulator and outlet valve sold separately).

Description

The ULTRA-LINE® Pressure Control Module provides a safe high-purity connection (VCR type) between system, gas supply and the ULTRA-LINE® regulators.

Design Features/Components

The Model 9001 Pressure Control Module includes the following features/components:

- 316 stainless steel panel
- 3 foot electropolished 316 stainless steel pigtail
- Male VCR type and butt-welded CGA connection on pigtail
- Aluminum plumbing mounting brackets
- Expert assembly in class 100 clean room
- Helium leak testing of components to 1×10^{-9} scc/sec
- Panel mounting holes to fit Matheson Gas Cabinet

Sold as separate items:

- Selection of ULTRA-LINE® single stage regulators
- Selection of ULTRA-LINE® diaphragm isolation valves

The ULTRA-LINE® regulators and valves are sold as separate items, and are shipped separate from the 9001 Pressure Control Module. Instructions for assembly of regulators and valves are included with the Pressure Control Module. To order a completely assembled system please contact Matheson Technical Services.

Ordering Information

Model Number	Description
9001-CGA	Stainless Steel Pressure Control Module with Pigtail
9001-NP	Stainless Steel Pressure Control Module without Pigtail
5405-CGA	Pigtail Only – Stainless Steel butt welded CGA by 1/4" Male VCR compatible

*Available CGA connections: 320, 330, 350, 540, 580, 590, 660
Please order regulators and valves as separate line items.*